

# **HSF-270 T5**

HS | STATIONARY RANGE Powered by FPT IVECO



SERVICE		PRP	ESP
POWER	kVA	250	275
POWER	kW	200	220
RATED SPEED	r.p.m.	1.5	500
MAIN VOLTAGE	V	400,	/230
AVAILABLE VOLTAGES	V	230/115 · 3 415/	230 V (t) · /240
RATED AT POWER FACTOR	Cos Phi	0,	.8



### HS | STATIONARY RANGE

HIMOINSA Company with quality certification ISO 9001

HIMOINSA gensets are compliant with EC mark which includes the following

- 2006/42/CE Machinery safety.
   2014/30/UE Electromagnetic compatibility.
   2014/30/UE electrical equipment designed for use within certain voltage limits
   2000/14/EC Sound Power level. Noise emissions outdoor equipment. (amended by
- FN 12100, FN 13857, FN 60204

Ambient conditions of reference according to ISO 8528-1:2020 normative: 1000 mbar, 25°C, 30% relative humidity.

Prime Power (PRP):
According to ISO 8528-1:2020, Prime power is the maximum power which a generating set is capable of delivering continuously whilst supplying a variable electrical load when operated for an unlimited number of hours per year under the agreed operating conditions with the maintenance intervals and procedures being carried out as prescribed by the manufacturer. The permissible average power output (Ppp) over 24 h of operation shall not exceed 70 % of the PRP.

Emergency Standby Power (ESP):
According to ISO 8528-1:2020, Emergency standby power is the maximum power available during a variable electrical power sequence, under the stated operating conditions, for which a generating set is capable of delivering in the event of a utility power outage or under test conditions for up to 200 h of operation per year with the maintenance intervals and procedures being carried out as prescribed by the manufacturers. The permissible average power output over 24 h of operation shall not exceed 70 % of the ESP

Continuous Power (COP): According to Standard ISO 8528-1:2020, this is the maximum power available for continuous loads for unlimited running hours a year between the maintenance times recommended by the manufacturer under the environmental conditions established by the same.

"Class G2" performance according to the load impact test according to ISO 8528-5:2020

HIMOINSA HEADOUARTERS:

HINIOINSA HEADQUARTERS: Fábrica: Ctra. Murcia - San Javier, Km. 23,6 | 30730 SAN JAVIER (Murcia) Spain Tel.+34 968 19 11 28 Fax +34 968 19 12 17 Fax +34 968 19 04 20 | info@himoinsa.com | www.himoinsa.com

Manufacture facilities: SPAIN • FRANCE • INDIA • CHINA • USA • BRAZIL • ARGENTINA

Subsidiaries:
PORTUGAL | POLAND | GERMANY | UK | SINGAPORE | UAE | PANAMA |
DOMINICAN REPUBLIC | ARGENTINA | ANGOLA | SOUTH AFRICA | MOROCOO



### STANDARD SOUNDPROOFING



WATER-COOLED



THREE PHASE



50 HZ



DIESEL

Himoinsa has the right to modify any feature without prior notice.

Weights and dimensions based on standard products. Illustrations may include optional equipment.

Technical data described in this catalogue correspond to the available information at the moment of printing.

The illustrations and images are indicative and may not coincide in their entirety with the product.

Industrial design under patent.



-23 15:21







## Engine Specifications | 1.500 r.p.m.

Rated Engine Output (PRP)	kW	216,1
Rated Engine Output (ESP)	kW	238,3
Manufacturer		FPT_IVECO
Model		N67.TE8P
Engine Type		4-stroke diesel
Injection Type		Direct, common rail
Aspiration Type		Turbocharged and after-cooled
Number of cylinders and arrangement		6-L
Bore and Stroke	mm	104 x 132
Displacement	L	6,7
Cooling System		Liquid (water + 50% glycol)
Lube Oil Specifications		10W-40 (API CJ-4, CK-4)
Compression Ratio		17:1

Lube oil consumption with full load		0,3 % of fuel consumption
Total oil capacity including tubes, filters	L	17
Total coolant capacity	L	27,6
Governor	Туре	Electrical
Air Filter	Туре	Dry



- Diesel engine
- 4-stroke cycle
- Water-cooled
- 24V electrical system
- Dry air filter
- Radiator with pusher fan
- Electronic governor
- Hot parts protection
- Moving parts protection
- Water separator filter with sensor (Optional).
- Water separator filter (no visible level) (Optional).



# Generator Specifications | MECC ALTE

Manufacturer		MECC ALTE
Model		ECO38.2M4C
Poles	No.	4
Connection type (standard)		Star-series
Mounting type		S-3 11"1/2
Insulation	Class	H class

Enclosure (according IEC-34-5)	IP23
Exciter system	Self-excited, brushless
Voltage regulator	A.V.R. (Electronic)
Bracket type	Single bearing
Coupling system	Flexible disc
Coating type	Standard (Vacuum impregnation)



- Self-excited and self-regulated
- 4 poles
- AVR governor
- IP23 protection
- H class insulation

- Single drive-shaft
- Flexible disc coupling








### **WEIGHT AND DIMENSIONS**

		Standard Version	Optional version
Length (L)	mm	4200	4200
Height (H)	mm	2210	2210
Width (W)	mm	1360	1360
Maximum shipping volume	m³	12,62	12,62
Weight with liquids in radiator and sump	Kg	2550	2420
Fuel tank capacity	L	400	-
Autonomy (70% PRP)	Hours	11	-
Autonomy (100% PRP)	Hours	8	-
		Plastic tank	No deposit

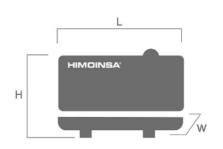

### **SOUND PRESSURE**

Sound pressure level $dB(A)@7m$ $68 \pm 2,4$	
--	--

### **APPLICATION DATA**

### **EXHAUST SYSTEM**

Maximum allowed back pressure	kPa	20
Exhaust Flange Size (external diameter)	mm	160
Heat dissipated by exhaust pipe	KCal/Kwh	560

### **NECESSARY AMOUNT OF AIR**

Intake air flow	m³/h	775,6
Cooling Air Flow	m³/s	3,97
Alternator fan air flow	m³/s	0,533

### **FUEL CONSUMPTION**

Fuel Consumption ESP	l/h	59,7
Fuel Consumption 100% PRP	l/h	52,4
Fuel Consumption 70 % PRP	l/h	36,1
Fuel Consumption 50 % PRP	l/h	25,7

### **FUEL SYSTEM**

Fuel Oil Specifications		Diesel
Fuel Tank	L	400
Other fuel tank capacities	L	0

### STARTING SYSTEM

Recommended battery	Ah	50 x 2
Auxiliary Voltage	Vdc	24

# $\odot$

- Steel chassis
- Galvanized slide carriage and brackets for transportation with forklift
- Lower power cable outlet with aluminum cover
- Side auxiliary cable outlet with aluminum cover
- Fuel tank in retention tray
- Soundproofing with foam and polyurethane film
- 4 side lifting points
- Anti-vibration shock absorbers

- Fuel tank
- Fuel level gauge
- External emergency stop switch
- Bodywork made from high quality steel plate
- High mechanical strength
- Epoxy polyester powder coating
- Full access for maintenance (water, oil and filters, no need to remove the canopy)
- Oil sump extraction kit

## Soundproofed version

- Emergency stop button (double emergency stop protection: Interior on the panel + Exterior on the bodywork)
- Door with window to visualize control panel, alarms and measurements
- Pressure locks
- IP Protection according to ISO 8528-13:2016
- 3 way valve for external fuel supply (available in 1/2" and 3/8" fittings) (Optional).
- Manual oil extraction pump (Optional).
- Fuel transfer pump (Optional).









# FEATURES OF THE CONTROL UNITS

Voltage between phases			M7X	CEM 7	CEA 7	CEC 7	M7X+CEC7
Current intensities		Voltage between phases	•	•	•	•	•
Prequency		Voltage between neutral and phase	•	•	•	•	•
Apparent power (Kwa)  Reactive power (kwa)	ø	Current intensities	•	•	•	•	•
Apparent power (Kwa)  Reactive power (kwa)	e E	Frequency	•	•	•	•	•
Reactive power (kVAr)	e e	Apparent power (Kva)	•	•	•	•	•
Power factor  Voltage between phases  Voltage between phases  Voltage between phases  Voltage between phases on neutral  Current intensities  Frequency  Apparent power  Active power  Reactive power  Power factor  Coolant temperature  Oil pressure  Fuel voltage  R.P.M.  Battery voltage  R.P.M.  Battery charge alternator voltage  High water temperature by sensor  Low water temperature by sensor  Low oil pressure  Low oil pressure  Voltage between phases  Power factor  Oil pressure  Voltage between phases  Voltage between phases  Oil pressure  O	ţo	Active power (Kw)	•	•	•	•	•
Voltage between phases	nere	Reactive power (kVAr)	•	•	•	•	•
Voltage between phases and neutral  Current intensities  Frequency  Apparent power  Active power  Reactive power  Power factor  Coolant temperature  Oil pressure  Fuel level (%)  Battery voltage  R,P,M.  Battery charge alternator voltage  High water temperature by sensor  Low water temperature by sensor  Low water level  Underspeed  Fuel level storage  Fuel storage  Fuel storage  Fuel storage  Fuel storage  Fuel storage  Fuel storage  Voltage shartery of a silver  Active power	9	Power factor	•	•	•	•	•
Current intensities  Frequency Apparent power Apparent power Active power  Reactive power  Coolant temperature Oil pressure Battery voltage R.P.M. Battery charge alternator voltage  High water temperature by sensor Low water temperature by sensor Low water temperature by sensor Low water level Unexpected shutdown Fuel storage Fu		Voltage between phases			•	•	•
Frequency Apparent power Active power Reactive power Reactive power  Coolant temperature Oil pressure Fuel level (%) Battery voltage R.P.M. Battery charge alternator voltage High water temperature  Low water temperature by sensor Low oil pressure • • • • • • • • • • • • • • • • • • •		Voltage between phases and neutral			•	•	•
Apparent power Active power Reactive power Reactive power Reactive power Reactive power Power factor  Coolant temperature Oil pressure Fuel level (%) Battery voltage R.P.M. Battery charge alternator voltage High water temperature Low water temperature by sensor Low water temperature by sensor Low oil pressure  Low oil pressure  Low oil pressure  Unexpected shutdown Fuel storage failure  Battery voltage failure  Overspeed Underspeed Fuel storage Fuel storag		Current intensities			•	•	•
Reactive power	m	Frequency			•	•	•
Reactive power	ë	Apparent power			•		
Power factor	E e e	Active power			•		
Coolant temperature	Ë	Reactive power			•		
Oil pressure	Σ	Power factor			•		
Fuel level (%)		Coolant temperature	•	•	•		•
Battery voltage R.P.M. Battery charge alternator voltage High water temperature High water temperature by sensor Low water temperature by sensor Low oil pressure Low oil pressure Low oil pressure Unexpected shutdown Fuel storage Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery voltage failure Overspeed Underspeed Start failure  Start failure  Battery voltage Start failure	s S	Oil pressure	•	•	•		•
R.P.M.	ğ	Fuel level (%)	•	•	•		•
Battery charge alternator voltage  High water temperature  High water temperature by sensor  Low water temperature by sensor  Low oil pressure  Low oil pressure  Low oil pressure by sensor  Low water level  Unexpected shutdown  Fuel storage  Fuel storage by sensor  Stop failure  Battery voltage failure  Battery charge alternator failure  Overspeed  Underspeed  Start failure  Start failure  Start failure	ä	Battery voltage	•	•	•		•
High water temperature    High water temperature by sensor    Low water temperature by sensor    Low oil pressure    Low oil pressure    Low water level    Unexpected shutdown    Fuel storage    Fuel storage    Stop failure    Battery voltage failure    Battery charge alternator failure    Overspeed    Underspeed    Start failure    Start failu	gine	R.P.M.	•	•	•		•
High water temperature by sensor  Low water temperature by sensor  Low oil pressure  Low oil pressure   Low oil pressure   Low oil pressure by sensor  Low water level  Unexpected shutdown  Fuel storage  Fuel storage   Fuel storage by sensor  Stop failure  Battery voltage failure  Battery voltage failure  Battery charge alternator failure  Overspeed  Underspeed  Start failure  • • • • • • • • • • • • • • • • • • •	ᇤ	Battery charge alternator voltage	•	•	•		•
Low water temperature by sensor  Low oil pressure  Low oil pressure by sensor  Low water level  Unexpected shutdown  Fuel storage  Fuel storage by sensor  Stop failure  Battery voltage failure  Battery charge alternator failure  Overspeed  Underspeed  Start failure  • • • • • • • • • • • • • • • • • •		High water temperature	•	•	•		•
Low oil pressure  Low oil pressure by sensor  Low water level  Unexpected shutdown  Fuel storage  Fuel storage by sensor  Stop failure  Battery voltage failure  Battery charge alternator failure  Overspeed  Underspeed  Start failure  • • • • • • • • • • • • • • • • • •		High water temperature by sensor	•	•	•		•
Low oil pressure by sensor  Low water level  Unexpected shutdown  Fuel storage  Fuel storage   Stop failure  Battery voltage failure  Battery charge alternator failure  Overspeed  Underspeed  Start failure  Start failure  Start failure  Overspeed		Low water temperature by sensor	•	•	•		•
Low water level Unexpected shutdown Fuel storage Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed Start failure  Start failure  Start failure		Low oil pressure	•	•	•		•
Unexpected shutdown  Fuel storage  Fuel storage by sensor  Stop failure  Battery voltage failure  Battery charge alternator failure  Overspeed  Underspeed  Start failure  Start failure		Low oil pressure by sensor	•	•	•		•
Fuel storage  Fuel storage by sensor  Stop failure  Battery voltage failure  Battery charge alternator failure  Overspeed  Underspeed  Start failure  Start failure		Low water level	•	•	•		•
Fuel storage by sensor  Stop failure  Battery voltage failure  Battery charge alternator failure  Overspeed  Underspeed  Start failure  Start failure		Unexpected shutdown	•	•	•		•
Stop failure  Battery voltage failure  Battery charge alternator failure  Overspeed  Underspeed  Start failure  Stort failure  Stop failure  S		Fuel storage	•	•	•		•
Battery voltage failure  Battery charge alternator failure  Overspeed  Underspeed  Start failure  Start failure  Outline of the property of th		Fuel storage by sensor	•	•	•		•
Battery charge alternator failure  Overspeed  Underspeed  Start failure  Battery charge alternator failure  Start failure  Start failure		Stop failure	•	•	•		•
Start failure • • • •	m	Battery voltage failure	•	•	•		•
Start failure • • • •	ţi	Battery charge alternator failure	•	•	•		•
Start failure • • • •	tec	Overspeed	•	•	•		•
Start failure • • • •		Underspeed	•	•	•		•
5 - ·	gine	Start failure	•	•	•		•
Emergency stop	<u></u>	Emergency stop	•	•	•	•	•

Standard

Optional







		MZV	CEM 7	CEA 7	CEC 7	MZV : CECZ
	High for many	M7X	CEM 7	CEA 7	CEC 7	M7X+CEC7
	High frequency	•	•	•	•	•
	Low frequency	•	•	•	•	•
	High voltage	•	•	•	•	•
ē	Low voltage	•	•	•	•	•
ctio	Short-circuit	•	•	•		•
ote	Asymmetry between phases	•	•	•	•	•
ē	Incorrect phase sequence	•	•	•	•	•
nato	Inverse power	•	•	•		•
ter	Overload	•	•	•		•
∢	Genset signal drop	•	•	•	•	•
	Total hour counter	•	•	•	•	•
	Partial hour counter	•	•	•	•	•
	Kilowatt meter	•	•	•	•	•
ers	Starts valid counters	•	•	•	•	•
č	Starts failure counters	•	•	•	•	•
ů	Maintenance	•	•	•	•	•
	RS232		0	0	0	0
	RS485		0	0	0	0
	Modbus IP		0	0	0	0
	Modbus		0	0	0	0
	CCLAN		0	0		
	Software for PC		0	0	0	0
õ	Analogue modem		0	0	0	0
ğ	GSM/GPRS modem		0	0	0	0
Ĕ	Remote screen		0	0		
Ę	Tele signal		① (8 + 4)	① (8 + 4)		
Ö	J1939	<b>◎ M7XJ</b>	0	0		◎ M7XJ
	Alarm history	• (100)	• (100)	• (100)	(100)	• (100)
	External start	•	•	•	•	•
	Start inhibition	•	•	•	•	•
	Mains failure start			•	•	•
	Start under normative EJP	•	•	•		•
	Pre-heating engine control	•	•	•		•
	Pre-heating engine control  Genset contactor activation	•	•		•	•
				•	•	
	Genset contactor activation			•		•
	Genset contactor activation  Mains & Genset contactor activation  Fuel transfer control	•	•	•		•
	Genset contactor activation  Mains & Genset contactor activation	•	•	•		•
	Genset contactor activation  Mains & Genset contactor activation  Fuel transfer control  Engine temperature control  Manual override	•	•	•		•
<u>a</u>	Genset contactor activation  Mains & Genset contactor activation  Fuel transfer control  Engine temperature control  Manual override  Programmable alarms	•	•	•		•
tures	Genset contactor activation  Mains & Genset contactor activation  Fuel transfer control  Engine temperature control  Manual override  Programmable alarms  Genset start function in test mode	•	•	•	•	•
Features	Genset contactor activation  Mains & Genset contactor activation  Fuel transfer control  Engine temperature control  Manual override  Programmable alarms  Genset start function in test mode  Programmable outputs	•	•	•	•	•
Features	Genset contactor activation  Mains & Genset contactor activation  Fuel transfer control  Engine temperature control  Manual override  Programmable alarms  Genset start function in test mode  Programmable outputs  Multilingual	•	•	•	•	•
Features	Genset contactor activation  Mains & Genset contactor activation  Fuel transfer control  Engine temperature control  Manual override  Programmable alarms  Genset start function in test mode  Programmable outputs  Multilingual  GPS Positioning	•	•	•	•	•
ctions Features	Genset contactor activation  Mains & Genset contactor activation  Fuel transfer control  Engine temperature control  Manual override  Programmable alarms  Genset start function in test mode  Programmable outputs  Multilingual  GPS Positioning  Synchronisation	•	•	•	•	•
Functions Features	Genset contactor activation  Mains & Genset contactor activation  Fuel transfer control  Engine temperature control  Manual override  Programmable alarms  Genset start function in test mode  Programmable outputs  Multilingual  GPS Positioning  Synchronisation  Mains synchronization	•	•	•	•	•
cial Functions Features	Genset contactor activation  Mains & Genset contactor activation  Fuel transfer control  Engine temperature control  Manual override  Programmable alarms  Genset start function in test mode  Programmable outputs  Multilingual  GPS Positioning  Synchronisation	•	•	•	•	•

Standard

Optional









# CONTROL PANELS



### AS5

Automatic panel WITHOUT transfer switch and WITHOUT mains control with CEM7 unit. (\*) AS5 as optional with CEA7 unit. Automatic panel without transfer switch and WITH mains control.



### AS7

Automatic control panel WITHOUT Transfer Switch and WITHOUT mains control with M7X unit.

Digital control unit M7X





### CC2

Himoinsa Switching cabinet WITH display.


Digital control unit CEC7



### AS5 + CC2

Automatic panel WITH transfer switch and with mains control. The display will be on the genset and on the cabinet.

Digital control unit CEM7+CEC7

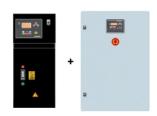

### AS7 + CC2

Automatic control panel WITH transfer switch and WITH mains control. The display will be on the genset and on the cabinet.

Digital control unit M7X+CEC7





### AC5

Automatic mains failure control panel. Wall-mounted cabinet WITH transfer switch and thermal magnetic protection (depending on current and voltage).

Digital control unit CEA7



#### Electric control and power panel with measurements devices and control unit (according to necessity and configuration)

- Battery Switch
- Adjustable earth leakage protection (time & sensitivity) standard in M5 and AS5, with thermal magnetic protection
- Battery charger (standard on gensets with automatic control panels)
- Heating resistor (standard on sets with automatic control panels)
- Battery charger alternator with ground connection

### Electrical system

- Starter battery/ies installed (cables and bracket included)
- Ground connection electrical installation with connection ready for ground spike (not supplied)
- Optional Battery (Optima) (Optional).

2025-SEP.-23 15:21

